


REV	DESCRIPTION	DATE	BY
1	ADDED LATEST VERSION OF SNS BOARD AND WIRING MODS	01/AUG/24	DJB
2	NEW BACKGROUND, LOGO & COMPONENT P/Ns	29MAY24	DJB

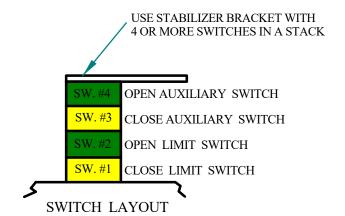

ACTUATOR SHOWN IN OPEN POSITION

1) INPUT POWER SOURCE TO BE 12VADC @ 10.0A MINIMUM. 2) FUSE ON SNS BOARD IS SLOW BLOW, TR5 PLUG IN 10.0A, 250V.

3) UNIT IS SHIPPED WITHOUT THE BATTERY PLUGGED IN. AFTER INSTALLING UNIT AND CONNECTING INCOMING POWER, PLUG THE 2 PIN BATTERY CONNECTOR INTO THE 2 PIN HEADER ON THE BOARD (J2). 4) CAMS FOR LIMIT SWITCHES ARE PRESET AT THE FACTORY. TO INCREASE OR DECREASE VALVE MOTION, SLIGHTLY ADJUST THE OPEN AND CLOSE CAMS.

5) THE "FAIL" CONDITION IS SET PER THE SLIDE SWITCH ON THE SNS BOARD FOR FAIL OPEN OR FAIL CLOSE. USER IS TO SET THE "FAIL" POSTION SWITCH PRIOR TO APPLYING POWER TO THE UNIT. 6) WHEN INCOMING POWER IS PRESENT, BLUE LED WILL BE LIT AND ACTUATOR RUNS OFF OF INCOMING POWER. WHEN INCOMING POWER FAILS, BLUE LED WILL TURN OFF AND THE YELLOW BATTERY LED WILL LIGHT - ACTUATOR WILL MOVE TO THE "FAIL" POSITION 1 TIME AND STAY THERE UNTIL POWER IS RESTORED.

7) RED LED WILL LIGHT WHEN BATTERY VOLTAGE GETS TOO LOW. GREEN LED WILL LIGHT WHEN BATTERY VOLTAGE IS ABOVE 10.5VDC. 8) DRY CONTACTS ARE PROVIDED TO INDICATE BATTERY STATUS AND INCOMING POWER STATUS. BATTERY STATUS CAN BE CHECKED WITH THE INCOMING POWER ON BY SHORTING THE 2 BATT TEST POINTS J7-2 & J10-1 MOMENTARILY.

9) CONTROL SIGNAL IS TO BE A DRY CONTACT SWITCH OR RELAY CONTACT ONLY! DO NOT APPLY VOLTAGE TO TERMINALS #4, #5 & #6!

reserved.

INDELAC CONTROLS, INC.

Indelac Controls, Inc. Florence, Ky. 41042

WIRING DIAGRAM, SAFE N SECURE 2000, 12VDC, "L" SERIES; WITH OPTIONAL HEATER AND 2 AUXILIARY SWITCHES - SINGLE **ENCLOSURE**

07JUL20 WJR

PROPRIETARY

THE INFORMATION CONTAINED IN THIS DRAWING/ DOCUMENT IS THE SOLE PROPERTY OF INDELAC CONTROLS INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF INDELAC CONTROLS IS PROHIBITED Copyright. ©2025 Indelac Controls, Inc All rights

W200707