
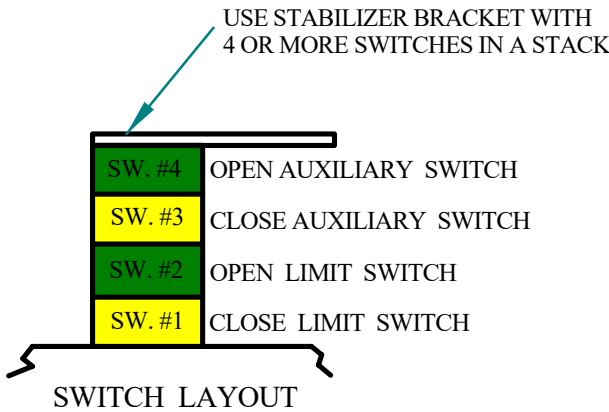


| REV | DESCRIPTION | DATE | BY |
|-----|--------------------------------------|---------|-----|
| 1 | ADDED OPTIONAL AUXILIARY SWITCHES | 25SEP13 | WJR |
| 2 | MODIFIED CURRENT NOTE; WAS 3.5 | 08OCT15 | WJR |
| 3 | AUX. SWITCH WIRE COLOR CHANGES | 22MAR16 | WJR |
| 4 | ADDED TERMINAL STRIP FOR POWER CONN. | 21FEB19 | WJR |
| 5 | NEW BOARD VIEW & CABLE CONNECTIONS | 06NOV23 | WJR |
| 6 | NEW BACKGROUND, LOGO & COMPONENT | 02JUN25 | DJB |

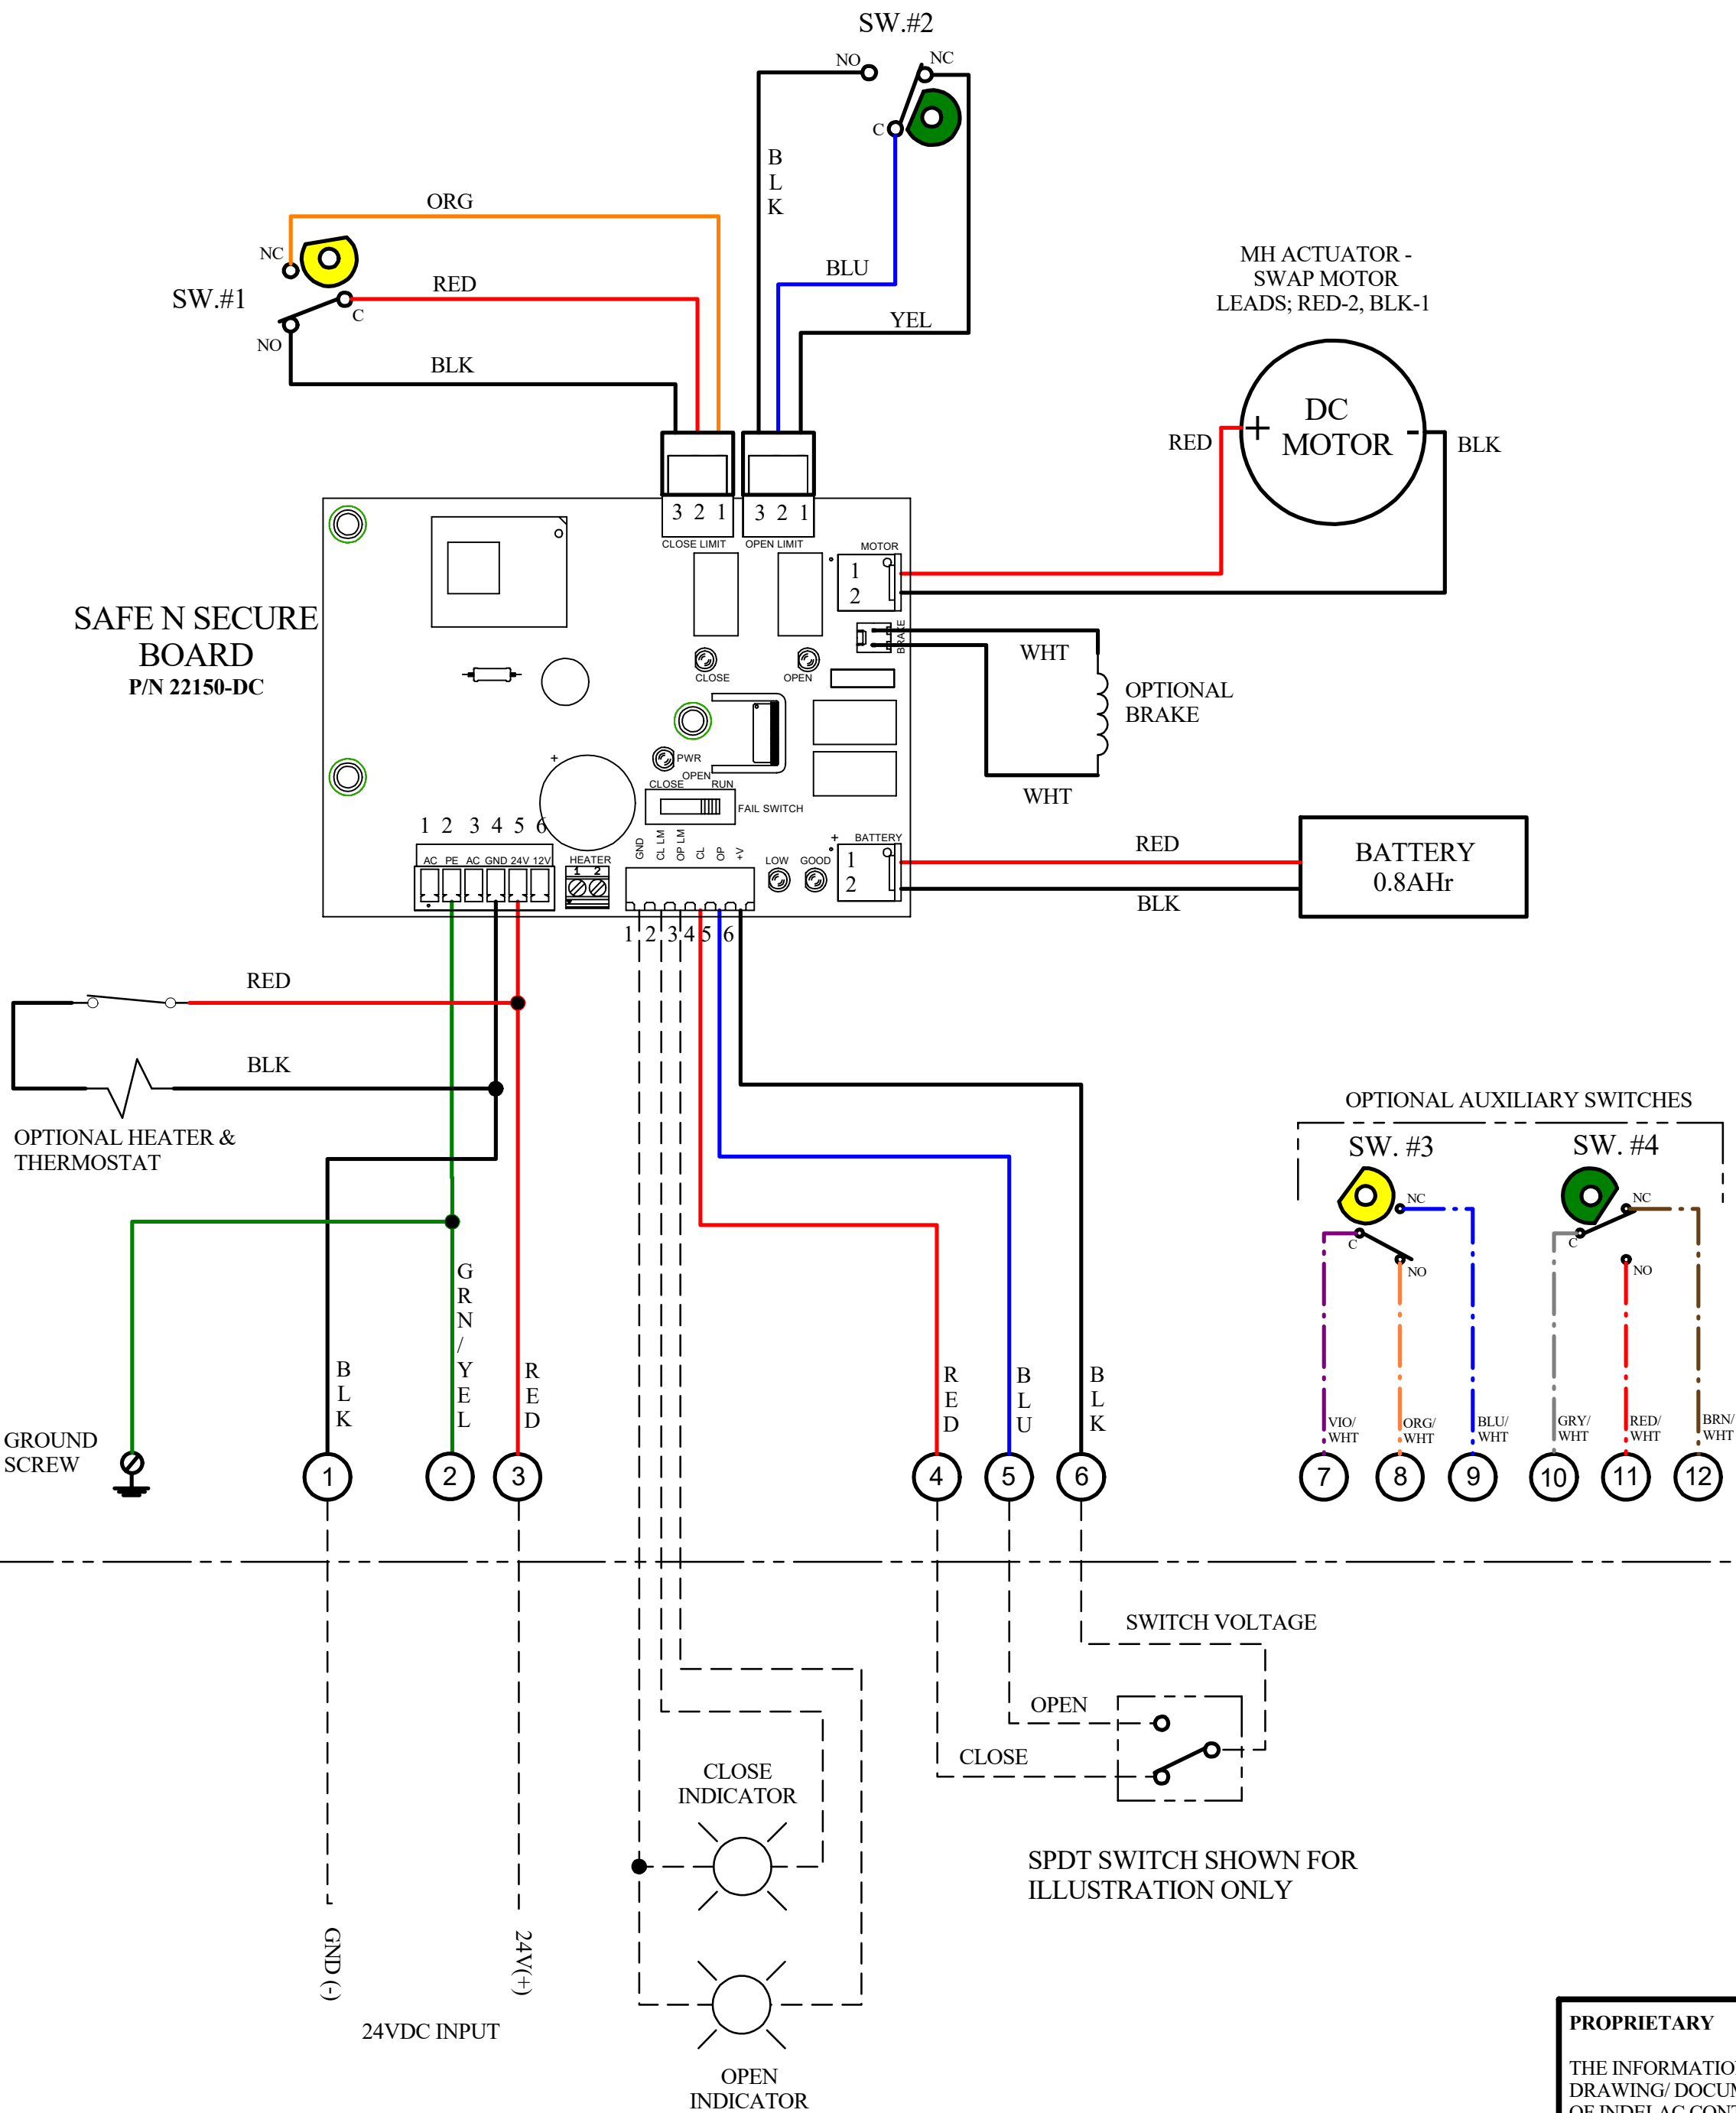

ACTUATOR SHOWN IN OPEN POSITION

- NOTES:**
- 1) CONTROL CAN OPERATE WITH 24VDC INPUT. INPUT POWER SOURCE TO BE @ 3.5A MINIMUM (INCLUDES HEATER).
 - 2) UNIT IS SHIPPED WITHOUT THE BATTERY PLUGGED IN. AFTER INSTALLING UNIT AND CONNECTING INCOMING POWER, PLUG BATTERY CONNECTOR INTO THE SAFE N SECURE BOARD, J1.
 - 3) CAMS FOR LIMIT SWITCHES ARE PRESET AT THE FACTORY. TO INCREASE OR DECREASE VALVE MOTION, THE CAMS CAN BE ADJUSTED SLIGHTLY.
 - 4) THE FAIL SWITCH NEEDS TO BE SET IN THE "RUN", "OPEN" OR "CLOSE" POSITION PRIOR TO INSTALLING THE COVER. WHEN INCOMING POWER FAILS:
"RUN" = ACTUATOR WILL CONTINUE TO RUN WITH USER COMMAND SIGNAL UNTIL BATTERY DIES.
"OPEN" = ACTUATOR WILL MOVE TO THE OPEN POSITION.
"CLOSE" = ACTUATOR WILL MOVE TO THE CLOSE POSITION.
 - 5) INDICATOR LAMPS NEED TO BE +12VDC ONLY. NEGATIVE OF LAMP IS CONNECTED TO PIN 1 OF J6.
 - 6) COMMAND SIGNAL USES A SINGLE POLE, DOUBLE THROW CONTACT (RELAY OR SWITCH) RATED FOR 3AMPS OR MORE. **DO NOT CONNECT EXTERNAL VOLTAGE.** WHEN THE COMMAND SIGNAL IS DELIVERED, THE OPEN OR CLOSED LED SHOULD LIGHT TO INDICATE THE MOTION OF THE ACTUATOR.
 - 7) WHEN INCOMING POWER IS PRESENT, BLUE LED WILL BE LIT AND ACTUATOR RUNS OFF OF INCOMING POWER. WHEN INCOMING POWER FAILS, BLUE LED WILL TURN OFF AND THE GREEN BATTERY LED WILL LIGHT - ACTUATOR WILL NOW RUN OFF OF BATTERY POWER UNTIL INCOMING POWER IS RESTORED.
 - 8) RED LED WILL LIGHT WHEN BATTERY VOLTAGE GETS TOO LOW.

FIELD WIRING

PROPRIETARY

THE INFORMATION CONTAINED IN THIS DRAWING/ DOCUMENT IS THE SOLE PROPERTY OF INDELAC CONTROLS INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF INDELAC CONTROLS IS PROHIBITED Copyright. © 2025 Indelac Controls, Inc All rights reserved.

| | | | |
|--|---------|---|--|
| INDELAC CONTROLS, INC. | | Indelac Controls, Inc. Florence, Ky. 41042 | |
| WIRING DIAGRAM, SAFE N SECURE, 24VDC, M SERIES; 0.8AHR BATTERY, OPTIONAL AUXILIARY SWITCHES, WITH HEATER & THERMOSTAT | | | |
| WJR | 24SEP13 | W130924 | |