


### FIELD WIRING

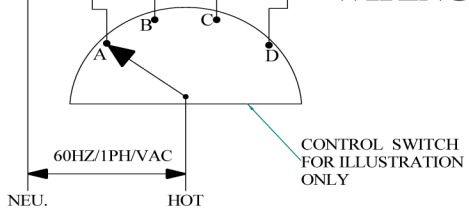

**OPERATION:**  
 POWER TO TERMINAL #1 & #2 POSITIONS SHAFT TO ZERO DEGREE "CCW ROTATION"  
 POWER TO TERMINAL #1 & #3 POSITIONS SHAFT TO 180 DEGREE POSITION "CW ROTATION"  
 POWER TO TERMINAL #1 & #4 POSITIONS SHAFT TO 90 DEGREE POSITION "CCW ROTATION"  
 POWER TO TERMINAL #1 & #5 POSITIONS SHAFT TO 90 DEGREE POSITION "CW ROTATION"

TERMINALS 7, 8, 9 & 10 ARE FOR LIGHT INDICATION WHEN A LAMP IS CONNECTED BETWEEN CONNECTION AND NEUTRAL.

DO NOT APPLY POWER TO TERMINAL #1 & #3 WITH ACTUATOR IN POSITION 'D', ACTUATOR WILL OVER TRAVEL

— FIELD WIRING

<b>IC<sub>I</sub></b> Indelac Controls, Inc.		
WIRING DIAGRAM FOR THREE POSITION 1PH ELECTRIC ACTUATOR WITH SOME COMMON OPTIONS		
JLR	12-18-96	<b>W891101</b>

# 115Vac Three Position Actuator