
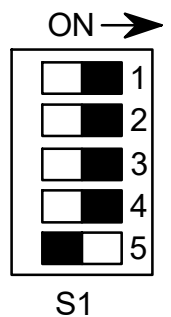


REV	DESCRIPTION	DATE	BY
1	CHANGED AUX SWITCH WIRE COLORS	31MAY16	WJR
2	NEW BOARD / CABLE CONNECTIONS	26JULY16	DJB
3	NEW BACKGROUND, LOGO & COMPONENT P/Ns	03JUN25	DJB

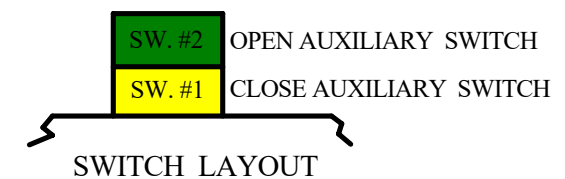

OPERATION:

ACTUATOR IS SHIPPED WITH THE BATTERY UNPLUGGED FROM THE BOARD. WHEN THE ACTUATOR IS INSTALLED, PLUG THE BATTERY INTO J1 ON THE SAFE AND SECURE BOARD.

ACTUATOR WILL RUN ON DC INPUT POWER USING 4 - 20mA COMMAND SIGNAL FROM CONTROL PANEL. IF COMMAND SIGNAL COMMUNICATION SHOULD BE BROKEN OR POWER TO ACTUATOR & COMMAND SIGNAL DROP OUT, BATTERY POWER WILL DRIVE THE ACTUATOR TO THE SET FAIL POSITION AND REMAIN THERE UNTIL THE INPUT POWER COMES BACK ON. SEE MANUAL FOR SETTING THE DESIRED FAIL POSITION USING THE SELECTOR SWITCHES.

IF INPUT POWER SHOULD FAIL, BUT THE COMMAND SIGNAL IS STILL PRESENT, THE ACTUATOR WILL CONTINUE TO RUN ON BATTERY POWER UNTIL BATTERY POWER DROPS BELOW 9 VDC.

FURTHER TRAVEL OF THE ACTUATOR IN THE OPEN DIRECTION CAN BE ACCOMPLISHED BY ADJUSTING THE SPAN "S" POT CLOCKWISE. FURTHER TRAVEL IN THE CLOSED DIRECTION CAN BE ACCOMPLISHED BY ADJUSTING THE ZERO "Z" POT COUNTER-CLOCKWISE.

PROPRIETARY

THE INFORMATION CONTAINED IN THIS
DRAWING/ DOCUMENT IS THE SOLE PROPERTY
OF INDELAC CONTROLS INC.
ANY REPRODUCTION IN PART OR AS A
WHOLE WITHOUT THE WRITTEN PERMISSION
OF INDELAC CONTROLS IS PROHIBITED
**Copyright. © 2025 Indelac Controls, Inc All rights
reserved.**

INDELAC
CONTROLS, INC.

Indelac Controls, Inc.
Florence, Ky. 41042

WIRING DIAGRAM, SAFE & SECURE, 115VAC
ACTUATOR WITH 4-20mA POSITIONER, OPTIONAL
BRAKE, HEATER / THERMOSTAT & 2 AUXILIARY
SWITCHES

WJR

16JUL15

W150716